

Code	Description	kvar	Stock	Suplement 1	Suplement 2	Suplement 3
R5H4650000100	FRS-35-440;	35 kvar	1	Standard	Standard	Manual switch 63 A
R57180.	FRM-40-400;	40 kvar	1	Standard	Standard	Standard
R5C40900000D6	FR4-40-400;	40 kvar	1	Standard	Standard	Standard
R5C39400000E2	FR4-50-400;	50 kvar	1	Standard	Standard	Standard
R5E4200030000	FR4-100-440;	100 kvar	2	Polycarbonate	Standard	Standard
R52410.	FRP-120-400;	120 kvar	1	Standard	Standard	Standard
R5E423EN00500	FR4-150-440;	150 kvar	1	Standard	Standard	Manual switch 400 A
R534100000098	FR6-240-400;	240 kvar	1	Standard	Standard	Standard
R5E429.	FR4-250-440;	250 kvar	1	Standard	Standard	Standard
R5E430.	FR4-300-440;	300 kvar	1	Standard	Standard	Standard
R532180001000	FR6-315-400;	315 kvar	2	Standard	Computer 8d	Standard
R532220001000	FR6-385-400;	385 kvar	2	Standard	Computer 8d	Standard
R5J430.	FR6-450-440;	450 kvar	1	Standard	Standard	Standard
R532300001000	FR8-490-400;	490 kvar	2	Standard	Computer 8d	Standard
R54420.	FR12-640-400;	640 kvar	1	Standard	Standard	Standard
R6E4200001000	FRE4-100-440;	100 kvar	1	Standard	Computer 8d	Standard
R6E422EN00N00	FRE4-125-440;	125 kvar	1	Standard	Standard	Automatic switch 250 A + Earth leakage
R63424ZF00ÑU1	FRE6-340-400;	340 kvar	1	Standard	Standard	Man. Switch 630 + Man.switch 200
R6K438.	FRE8-650-440;	650 kvar	1	Standard	Standard	Standard
R36610.	STD3-7,5-440;	7,5 kvar	6	Standard	Standard	Standard
R366100000100	STD3-7,5-440;	7,5 kvar	5	Standard	Standard	Manual switch 63 A
R3H025.	STD3-7,5-230;	7,5 kvar	3	Standard	Standard	Standard
R36620.	STD3-12,5-440;	12,5 kvar	17	Standard	Standard	Standard
R3H211.	STD3-12,5-230;	12,5 kvar	4	Standard	Standard	Standard
R3H120EN00K00	STD3-12,5-230;	12,5 kvar	1	Standard	Standard	Automatic switch 63 A + Earth leakage
R366250000K00	STD3-17,5-440;	17,5 kvar	7	Standard	Standard	Automatic switch 63 A + Earth leakage
R36625.	STD3-17,5-440;	17,5 kvar	6	Standard	Standard	Standard
R3H050.	STD3-18,75-230;	18,75 kvar	2	Standard	Standard	Standard
R36628EN00K00	STD3-20-440;	20 kvar	2	Standard	Standard	Automatic switch 63 A + Earth leakage
R36629ZG00000	STD3-21-440;	21 kvar	5	Standard	Standard	Standard
R36635.	STD3-25-440;	25 kvar	11	Standard	Standard	Standard
R366350000K00	STD3-25-440;	25 kvar	5	Standard	Standard	Automatic switch 63 A + Earth leakage
R34604000EKXX	STD4-25-440;	25 kvar	1	Standard	computer Plus 8T-CDI	Automatic switch 63 A + Earth leakage
R346040020K00	STD4-25-440;	25 kvar	1	Fan	Standard	Automatic switch 63 A + Earth leakage
R36630ZG00000	STD3-26,25-440;	26,25 kvar	4	Standard	Standard	Standard
R36637.	STD3-31,25-440;	31,25 kvar	22	Standard	Standard	Standard
R366370000K00	STD3-31,25-440;	31,25 kvar	6	Standard	Standard	Automatic switch 63 A + Earth leakage

Code	Description	kvar	Stock	Suplement 1	Suplement 2	Suplement 3
R36637EN00K00	STD3-31,25-440;	31,25 kvar	5	Standard	Standard	Automatic switch 63 A + Earth leakage
R366370010000	STD3-31,25-440;	31,25 kvar	2	Autotransf. maniobra	Standard	Standard
R36639EN00K00	STD3-37,5-440;	37,5 kvar	9	Standard	Standard	Automatic switch 63 A + Earth leakage
R36639.	STD3-37,5-440;	37,5 kvar	5	Standard	Standard	Standard
R345070020000	STD4-37,5-400;	37,5 kvar	1	Fan	Standard	Standard
R36639EN20K00	STD3-37,5-440;	37,5 kvar	1	Fan	Standard	Automatic switch 63 A + Earth leakage
R346100000L00	STD4-43,75-440;	43,75 kvar	5	Standard	Standard	Automatic switch 125 A + Earth leakage
R34610.	STD4-43,75-440;	43,75 kvar	5	Standard	Standard	Standard
R34610EN00L00	STD4-43,75-440;	43,75 kvar	3	Standard	Standard	Automatic switch 125 A + Earth leakage
R346100000300	STD4-43,75-440;	43,75 kvar	2	Standard	Standard	Manual switch 200 A
R34615.	STD4-50-440;	50 kvar	8	Standard	Standard	Standard
R346150000L00	STD4-50-440;	50 kvar	3	Standard	Standard	Automatic switch 125 A + Earth leakage
R345150010000	STD4-50-400;	50 kvar	2	Autotransf. maniobra	Standard	Standard
R346150000300	STD4-50-440;	50 kvar	1	Standard	Standard	Manual switch 200 A
R3H211EN00M00	STD4-52,5-230;	52,5 kvar	1	Standard	Standard	Automatic switch 160 A + Earth leakage
R34620.	STD4-55-440;	55 kvar	4	Standard	Standard	Standard
R346200000300	STD4-55-440;	55 kvar	2	Standard	Standard	Manual switch 200 A
R346200000B00	STD4-55-440;	55 kvar	2	Standard	Standard	Automatic switch 125 A
R34622.	STD4-60-440;	60 kvar	3	Standard	Standard	Standard
R346300000C00	STD4-70-440;	70 kvar	3	Standard	Standard	Automatic switch 160A
R34630.	STD4-70-440;	70 kvar	3	Standard	Standard	Standard
R34632.	STD4-75-440;	75 kvar	1	Standard	Standard	Standard
R34635.	STD4-80-440;	80 kvar	7	Standard	Standard	Standard
R346350000300	STD4-80-440;	80 kvar	2	Standard	Standard	Manual switch 200 A
R34635EN00M00	STD4-80-440;	80 kvar	2	Standard	Standard	Automatic switch 160 A + Earth leakage
R346350000D00	STD4-80-440;	80 kvar	1	Standard	Standard	Automatic switch 250A
R346360000300	STD4-87,5-440;	87,5 kvar	4	Standard	Standard	Manual switch 200 A
R346360000N00	STD4-87,5-440;	87,5 kvar	3	Standard	Standard	Automatic switch 250 A + Earth leakage
R3P838.	STD6-90-460;	90 kvar	1	Standard	Standard	Standard
R34637.	STD4-100-440;	100 kvar	8	Standard	Standard	Standard
R346370000N00	STD4-100-440;	100 kvar	4	Standard	Standard	Automatic switch 250 A + Earth leakage
R346370000300	STD4-100-440;	100 kvar	1	Standard	Standard	Manual switch 200 A
R34637EN00M00	STD4-100-440;	100 kvar	1	Standard	Standard	Automatic switch 160 A + Earth leakage
R34639EN00M00	STD4-105-440;	105 kvar	6	Standard	Standard	Automatic switch 160 A + Earth leakage
R3P655.	STD6-105-440;	105 kvar	3	Standard	Standard	Standard
R3P6550000N00	STD6-105-440;	105 kvar	1	Standard	Standard	Automatic switch 250 A + Earth leakage
R3P655EN00O00	STD6-105-440;	105 kvar	1	Standard	Standard	Automatic switch 400 A + Earth leakage

Code	Description	kvar	Stock	Suplement 1	Suplement 2	Suplement 3
R3P655EN20N00	STD6-105-440;	105 kvar	1	Fan	Standard	Automatic switch 250 A + Earth leakage
R3P448.	STD6-120-400;	120 kvar	1	Standard	Standard	Standard
R3P6570000500	STD6-135-440;	135 kvar	3	Standard	Standard	Manual switch 400 A
R3P6570000400	STD6-135-440;	135 kvar	1	Standard	Standard	Manual switch 250A
R3P6570010N00	STD6-135-440;	135 kvar	1	Autotransf. maniobra	Standard	Automatic switch 250 A + Earth leakage
R3P657.	STD6-135-440;	135 kvar	1	Standard	Standard	Standard
R3P4520010000	STD6-137,5-400;	137,5 kvar	1	Autotransf. maniobra	Standard	Standard
R3P652.	STD6-137,5-440;	137,5 kvar	1	Standard	Standard	Standard
R3P6580000500	STD6-150-440;	150 kvar	1	Standard	Standard	Manual switch 400 A
R3P6590000500	STD6-165-440;	165 kvar	2	Standard	Standard	Manual switch 400 A
R3P6590002000	STD6-165-440;	165 kvar	1	Standard	Computer 14d	Automatic switch 400 A + Earth leakage
R3R67300000BU	STD12-165-440;	165 kvar	1	Standard	Standard	Standard
R3P660EN00000	STD6-180-440;	180 kvar	2	Standard	Standard	Automatic switch 400 A + Earth leakage
R3P6600000500	STD6-180-440;	180 kvar	1	Standard	Standard	Manual switch 400 A
R3P660.	STD6-180-440;	180 kvar	1	Standard	Standard	Standard
R3P660EN20000	STD6-180-440;	180 kvar	1	Fan	Standard	Automatic switch 400 A + Earth leakage
R3R700.	STD12-195-440;	195 kvar	5	Standard	Standard	Standard
R3R700EN23000	STD12-195-440;	195 kvar	1	Fan	computer Plus 8T	Automatic switch 400 A + Earth leakage
R3R701.	STD12-210-440;	210 kvar	1	Standard	Standard	Standard
R3R702.	STD12-225-440;	225 kvar	2	Standard	Standard	Standard
R3R7030010000	STD12-240-440;	240 kvar	9	Autotransf. maniobra	Standard	Standard
R3R703.	STD12-240-440;	240 kvar	2	Standard	Standard	Standard
R3R704.	STD12-255-440;	255 kvar	5	Standard	Standard	Standard
R3R7040072000	STD12-255-440;	255 kvar	2	Autotransf. +Policarbonate + Fan	Computer 14d	Standard
R3R7040000600	STD12-255-440;	255 kvar	1	Standard	Standard	Manual switch 630 A
R3R705EN2AP00	STD12-270-440;	270 kvar	1	Fan	computer Plus 8T-C	Automatic switch 630 A + Earth leakage
R3R705EN00P00	STD12-270-440;	270 kvar	1	Standard	Standard	Automatic switch 630 A + Earth leakage
R3R697.	STD12-287,5-440;	287,5 kvar	1	Standard	Standard	Standard
R3I6180090000	STD SC8-300-400;	300 kvar	2	60 Hz	Standard	Standard
R3R707.	STD12-300-440;	300 kvar	1	Standard	Standard	Standard
R3R7080000600	STD12-315-440;	315 kvar	2	Standard	Standard	Manual switch 630 A
R3R708.	STD12-315-440;	315 kvar	1	Standard	Standard	Standard
R3R708EN00P00	STD12-315-440;	315 kvar	1	Standard	Standard	Automatic switch 630 A + Earth leakage
R3R709EN00P00	STD12-330-440;	330 kvar	1	Standard	Standard	Automatic switch 630 A + Earth leakage
R3R710.	STD12-345-440;	345 kvar	2	Standard	Standard	Standard
R3R7110010000	STD12-360-440;	360 kvar	1	Autotransf. maniobra	Standard	Standard
R3R711.	STD12-360-440;	360 kvar	1	Standard	Standard	Standard

Code	Description	kvar	Stock	Suplement 1	Suplement 2	Suplement 3
R3R711EN00P00	STD12-360-440;	360 kvar	1	Standard	Standard	Automatic switch 630 A + Earth leakage
R3E466.	STD8-390-440;	390 kvar	1	Standard	Standard	Standard
R3I6220090000	STD SC8-412-400;	412 kvar	4	60 Hz	Standard	Standard
R3E470.	STD8-420-440;	420 kvar	2	Standard	Standard	Standard
R3E472.	STD8-450-440;	450 kvar	3	Standard	Standard	Standard
R3E474.	STD8-480-440;	480 kvar	1	Standard	Standard	Standard
R3I6260090000	STD SC8-506-400;	506 kvar	2	60 Hz	Standard	Standard
R3E501.	STD SC8-550-440;	550 kvar	1	Standard	Standard	Standard
R3E503.	STD SC8-650-440;	650 kvar	4	Standard	Standard	Standard
R3E505.	STD SC8-750-440;	750 kvar	1	Standard	Standard	Standard