

Code	Description	kvar	Stock	Suplement 1	Suplement 2	Suplement 3
R3J0050000K00	OPTIM 3-5-230;	5 kvar	1	Standard	Standard	Automatic switch 63 A + Earth leakage
R3Q651EN00000	OPTIM 1-6,25-440;	6,25 kvar	5	Standard	Standard	Standard
R3Q761EN00000	OPTIM 2-7,5-440;	7,5 kvar	6	Standard	Standard	Standard
R3J105.	OPTIM 3-7,5-440;	7,5 kvar	1	Standard	Standard	Standard
R3Q671EN00000	OPTIM 1-10-440;	10 kvar	2	Standard	Standard	Standard
R3Q771EN00000	OPTIM 2-10,5-440;	10,5 kvar	4	Standard	Standard	Standard
R3Q681EN00000	OPTIM 1-12,5-440;	12,5 kvar	5	Standard	Standard	Standard
R3L110.	OPTIM 3 P&P-12,5-440;	12,5 kvar	4	Standard	Standard	Standard
R3Q781EN00000	OPTIM 2-12,5-440;	12,5 kvar	3	Standard	Standard	Standard
R3L1100000K00	OPTIM 3 P&P-12,5-440;	12,5 kvar	1	Standard	Standard	Automatic switch 63 A + Earth leakage
R3J110EN00K00	OPTIM 3-12,5-440;	12,5 kvar	1	Standard	Standard	Automatic switch 63 A + Earth leakage
R3L110000S000	OPTIM 3 P&P-12,5-440;	12,5 kvar	1	Standard	computer SMART III 6	Standard
R3L110000SK00	OPTIM 3 P&P-12,5-440;	12,5 kvar	1	Standard	computer SMART III 6	Automatic switch 63 A + Earth leakage
R3L1100010K00	OPTIM 3 P&P-12,5-440;	12,5 kvar	1	Autotransf. maniobra	Standard	Automatic switch 63 A + Earth leakage
R3L1A2.	OPTIM 3 P&P-12,5-230;	12,5 kvar	1	Standard	Standard	Standard
R3L1A20000K00	OPTIM 3 P&P-12,5-230;	12,5 kvar	1	Standard	Standard	Automatic switch 63 A + Earth leakage
R3Q691EN00000	OPTIM 1-15-440;	15 kvar	3	Standard	Standard	Standard
R3Q7E1EN00000	OPTIM 2-17,5-440;	17,5 kvar	10	Standard	Standard	Standard
R3L120000S000	OPTIM 3 P&P-17,5-440;	17,5 kvar	2	Standard	computer SMART III 6	Standard
R3L1A7.	OPTIM 3 P&P-17,5-230;	17,5 kvar	2	Standard	Standard	Standard
R3L1200007K00	OPTIM 3 P&P-17,5-440;	17,5 kvar	1	Standard	computer Plus communications	Automatic switch 63 A + Earth leakage
R3L120000SK00	OPTIM 3 P&P-17,5-440;	17,5 kvar	1	Standard	computer SMART III 6	Automatic switch 63 A + Earth leakage
R3L1A8000K0PR	OPTIM 3 P&P-20-230;	20 kvar	1	Standard	#N/A	Standard
R3L119ZG00000	OPTIM 3 P&P-21-440;	21 kvar	3	Standard	Standard	Standard
R3Q7G1EN00000	OPTIM 2-22,5-440;	22,5 kvar	1	Standard	Standard	Standard
R3Q6F1EN00000	OPTIM 1A-25-440;	25 kvar	7	Standard	Standard	Standard
R3Q7H1EN00000	OPTIM 2-25-440;	25 kvar	3	Standard	Standard	Standard
R5R455.	Optim FRS-25-440;	25 kvar	2	Standard	Standard	Standard
R34604000EKXX	STD4-25-440;	25 kvar	1	Standard	computer Plus 8T-CDI	Automatic switch 63 A + Earth leakage
R3L1300000K00	OPTIM 3 P&P-25-440;	25 kvar	1	Standard	Standard	Automatic switch 63 A + Earth leakage
R3L1A5.	OPTIM 3 P&P-25-230;	25 kvar	1	Standard	Standard	Standard
R3L1A50000X61	OPTIM 3 P&P-25-230;	25 kvar	1	Standard	Standard	Automatic switch 80 A + Earth leakage
R3L132ZG00000	OPTIM 3 P&P-26,25-440;	26,25 kvar	2	Standard	Standard	Standard
R3Q6D1EN00000	OPTIM 1A-30-440;	30 kvar	8	Standard	Standard	Standard
R3Q7J1EN00000	OPTIM 2-30-440;	30 kvar	1	Standard	Standard	Standard
R36637EN00K00	STD3-31,25-440;	31,25 kvar	59	Standard	Standard	Automatic switch 63 A + Earth leakage
R3L140.	OPTIM 3 P&P-31,25-440;	31,25 kvar	8	Standard	Standard	Standard

Code	Description	kvar	Stock	Suplement 1	Suplement 2	Suplement 3
R3L140000S000	OPTIM 3 P&P-31,25-440;	31,25 kvar	2	Standard	computer SMART III 6	Standard
R3L1A90000L00	OPTIM 3 P&P-31,25-230;	31,25 kvar	1	Standard	Standard	Automatic switch 125 A + Earth leakage
R3L2A6.	OPTIM 5 P&P-35-230;	35 kvar	2	Standard	Standard	Standard
R3L1990000006	OPTIM 5 P&P-35-440;	35 kvar	1	Standard	Standard	Standard
R3L1500000K00	OPTIM 3 P&P-37,5-440;	37,5 kvar	4	Standard	Standard	Automatic switch 63 A + Earth leakage
R3H146EN00M00	STD4-37,5-230;	37,5 kvar	1	Standard	Standard	Automatic switch 160 A + Earth leakage
R55370.	FRF-37,5-440;	37,5 kvar	1	Standard	Standard	Standard
R34610EN00L00	STD4-43,75-440;	43,75 kvar	9	Standard	Standard	Automatic switch 125 A + Earth leakage
R3L160.	OPTIM 3 P&P-43,75-440;	43,75 kvar	6	Standard	Standard	Standard
R3L1600000L00	OPTIM 3 P&P-43,75-440;	43,75 kvar	1	Standard	Standard	Automatic switch 125 A + Earth leakage
R3L1600010000	OPTIM 3 P&P-43,75-440;	43,75 kvar	1	Autotransf. maniobra	Standard	Standard
R3L160001S000	OPTIM 3 P&P-43,75-440;	43,75 kvar	1	Autotransf. maniobra	computer SMART III 6	Standard
R34615EN00L00	STD4-50-440;	50 kvar	1	Standard	Standard	Automatic switch 125 A + Earth leakage
R3J8990000300	OPTIM 6-50-230;	50 kvar	1	Standard	Standard	Manual switch 200 A
R3L1650000L00	OPTIM 3 P&P-50-440;	50 kvar	1	Standard	Standard	Automatic switch 125 A + Earth leakage
R3L165000NOCG	OPTIM 3 P&P-50-440;	50 kvar	1	Standard	#N/A	Standard
R3L1700000L00	OPTIM 3 P&P-52,5-440;	52,5 kvar	5	Standard	Standard	Automatic switch 125 A + Earth leakage
R3L170.	OPTIM 3 P&P-52,5-440;	52,5 kvar	2	Standard	Standard	Standard
R3L170000S000	OPTIM 3 P&P-52,5-440;	52,5 kvar	1	Standard	computer SMART III 6	Standard
R3L210.	OPTIM 5 P&P-55-440;	55 kvar	7	Standard	Standard	Standard
R34620000P000	STD4-55-440;	55 kvar	3	Standard	computer PLUS+EDS	Standard
R3L2100000L00	OPTIM 5 P&P-55-440;	55 kvar	2	Standard	Standard	Automatic switch 125 A + Earth leakage
R3L2100000300	OPTIM 5 P&P-55-440;	55 kvar	1	Standard	Standard	Manual switch 200 A
R34623EN00L00	STD4-60-440;	60 kvar	1	Standard	Standard	Automatic switch 125 A + Earth leakage
R3H217EN00N00	STD6-60-230;	60 kvar	1	Standard	Standard	Automatic switch 250 A + Earth leakage
R3L180.	OPTIM 3 P&P-62,5-440;	62,5 kvar	12	Standard	Standard	Standard
R3J150.	OPTIM 3A-62,5-440;	62,5 kvar	4	Standard	Standard	Standard
R3L1800000L00	OPTIM 3 P&P-62,5-440;	62,5 kvar	3	Standard	Standard	Automatic switch 125 A + Earth leakage
R3L2200000L00	OPTIM 5 P&P-70-440;	70 kvar	1	Standard	Standard	Automatic switch 125 A + Earth leakage
R3J220000T300	OPTIM 4-75-440;	75 kvar	1	Standard	computer SMART III 12	Manual switch 200 A
R3L2230000MKE	OPTIM 5 P&P-75-440;	75 kvar	1	Standard	Standard	Automatic switch 160 A + Earth leakage
R34635000P000	STD4-80-440;	80 kvar	1	Standard	computer PLUS+EDS	Standard
R34635EN00M00	STD4-80-440;	80 kvar	1	Standard	Standard	Automatic switch 160 A + Earth leakage
R3L230.	OPTIM 5 P&P-90-440;	90 kvar	6	Standard	Standard	Standard
R3L2300000K000	OPTIM 5 P&P-90-440;	90 kvar	1	Standard	#N/A	Standard
R3L230000S0MK	OPTIM 5 P&P-90-440;	90 kvar	1	Standard	computer SMART III 6	Standard
R3L2300000300	OPTIM 5 P&P-90-440;	90 kvar	1	Standard	Standard	Manual switch 200 A

Code	Description	kvar	Stock	Suplement 1	Suplement 2	Suplement 3
R3L2300000M00	OPTIM 5 P&P-90-440;	90 kvar	1	Standard	Standard	Automatic switch 160 A + Earth leakage
R3L2300000N00	OPTIM 5 P&P-90-440;	90 kvar	1	Standard	Standard	Automatic switch 250 A + Earth leakage
R34637.	STD4-100-440;	100 kvar	2	Standard	Standard	Standard
R346370000N00	STD4-100-440;	100 kvar	1	Standard	Standard	Automatic switch 250 A + Earth leakage
R5S420000N00	OPTIM FR4-100-440;	100 kvar	1	Standard	#N/A	Standard
R6E4200001000	FRE4-100-440;	100 kvar	1	Standard	Computer 8d	Standard
R3L240.	OPTIM 5 P&P-105-440;	105 kvar	10	Standard	Standard	Standard
R3L2400000M00	OPTIM 5 P&P-105-440;	105 kvar	2	Standard	Standard	Automatic switch 160 A + Earth leakage
R3L2400000N00	OPTIM 5 P&P-105-440;	105 kvar	1	Standard	Standard	Automatic switch 250 A + Earth leakage
R54R92.	OPTIM FRS P&P-105-440;	105 kvar	1	Standard	Standard	Standard
R34639EN00M00	STD4-105-440;	105 kvar	1	Standard	Standard	Automatic switch 160 A + Earth leakage
R3L2400000300	OPTIM 5 P&P-105-440;	105 kvar	1	Standard	Standard	Manual switch 200 A
R3L28800000GX	OPTIM 9 P&P-131,25-440;	131,25 kvar	1	Standard	Standard	Standard
R3L250.	OPTIM 5 P&P-135-440;	135 kvar	9	Standard	Standard	Standard
R3L2500000D00	OPTIM 5 P&P-135-440;	135 kvar	1	Standard	Standard	Automatic switch 250A
R3L2500000N00	OPTIM 5 P&P-135-440;	135 kvar	1	Standard	Standard	Automatic switch 250 A + Earth leakage
R3L260.	OPTIM 5 P&P-150-440;	150 kvar	5	Standard	Standard	Standard
R3L310.	OPTIM 9 P&P-165-440;	165 kvar	2	Standard	Standard	Standard
R3L320.	OPTIM 9 P&P-195-440;	195 kvar	1	Standard	Standard	Standard
R3L336003TODV	OPTIM 9 P&P-240-440;	240 kvar	5	Polycarbonate	computer SMART III 12	Standard
R4E108.	OPTIM HYB2-270-440;	270 kvar	1	Standard	Standard	Standard
R3L350.	OPTIM 9 P&P-270-440;	270 kvar	1	Standard	Standard	Standard
R64E320009P00	Optim FRE4-350-440;	350 kvar	1	Standard	#N/A	Automatic switch 630 A + Earth leakage
R3L430.	Optim 8 P&P-390-440;	390 kvar	1	Standard	Standard	Standard
R3I6260090000	STD SC8-506-400;	506 kvar	2	60 Hz	Standard	Standard